


Ultra Catcher 4

 
> WHAT'S INSIDE

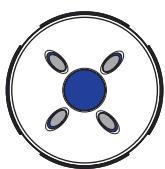

Ultra Catcher 4



Lanyard




Simple instructions

> GETTING STARTED

Remove the battery cover from the back of the main unit and insert two AAA batteries. When the batteries are installed, the four buttons will light up in green.

Each LED button represents an individual account, allowing you to turn off unused accounts to save power. Press the LED button 3 times to turn off the account. When the account is powered off, the button will light up red and will no longer respond.

*It is recommended to turn off the power frequently when not in use to prevent the battery from draining.

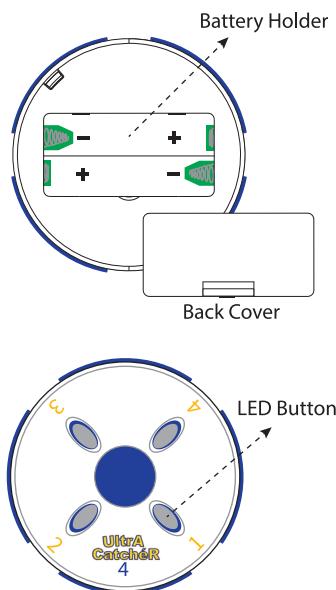

> STATUS INDICATION

When the power is turned on, the status light will come on once every 10 seconds for 3 minutes.

	Green Flashing	Connectable
	Purple Flashing	Connected
	Red Flashing	Batteries are low

When the battery power is low, the red light will blink continuously once every 10 seconds. If this happens, replace the batteries immediately.

> LED INDICATION

	Found a PokeStop
	Found a Pokemon
	Found an unknown Pokemon
	Capturing Pokemon
	Item bag is full
	Successfully caught a Pokemon
	Successfully spun a PokeStop
	Pokemon fled
	Out of Poke Balls
	Pokemon storage is full
	Phone network disconnected
	Failed to spin PokeStop

> CONNECTION METHOD


- (1) Turn on your mobile Bluetooth.
- (2) Tap the Main Menu
- (3) Tap [Settings]
- (4) Tap [Connected Devices and Services]



- (5) Tap [Accessory Devices]



- (6) When the Ultra Catcher 4 is turned on, four devices will appear on the screen. When you press any LED button on the Ultra Catcher 4, the "Pokemon GO Plus" icon will light up. Select the "Pokemon GO Plus" you want to pair from the screen and tap it.

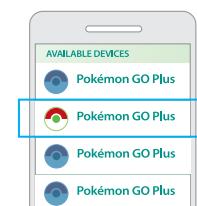

- (7) After successful connection establishment, the LED button on Ultra Catcher 4 will flash purple, indicating activation of the Pokemon GO Plus icon on the screen.



> How to connect after completing the connection settings

Launch "Pokemon GO" and tap the icon in the upper right corner of the screen. When the icon becomes bright, the connection is successful.



If the connection fails, access your phone's Bluetooth settings, select "Forget device" for "Pokemon GO Plus", and then proceed to restart the initial connection method.

> NOTES

- After operating for 3 minutes, it enters power-saving mode. Functionality continues, but lights are not displayed.
- Due to game settings, it automatically disconnects every hour. You need to reconnect in the game.
- This product is not waterproof or dustproof.
- Please note that the app has a limited movement speed and will not capture or collect anything while moving at speeds above 24 km/h.
- Device & System Requirements: This device requires a Bluetooth Low Energy (BLE) compatible smartphone with the Pokemon GO app installed. It is compatible with iPhone 6S or later devices running iOS 15 or higher. For Android users, the device requires a 64-bit smartphone with at least 4 GB RAM, Bluetooth Smart (Bluetooth 4.0 or higher) capability, and Android 9.0 or higher installed.
- This Product is not sponsored, endorsed, or approved by Nintendo, The Pokemon Company or Niantic.
- Storage temperature: -5°C to 30°C ; Environmental temperature : 0°C ~ 35°C (32°F ~ 95°F)

P/N : Ultra Catcher 4
M/N : ZPP006G



FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Official Website



Facebook




Instagram



International Official

UltrA CatchéR 4


▶ 内容物

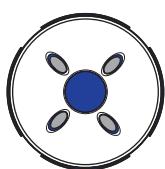

Ultra Catcher 4



 ストラップ




取扱説明書(簡易版)

▶ はじめに

本体背面の電池カバーを取り外し、単4乾電池2本を挿入してください。電池をセットすると、4つのボタンが緑色に点灯します。

各LEDボタンは個別のアカウントに対応しており、使用しないアカウントの電源をオフにすることで電池を節約できます。LEDボタンを3回押すと、そのアカウントの電源がオフになります。電源がオフになると、ボタンが赤色に点灯し、それ以降は反応しなくなります。

*電池の消耗を防ぐため、使用しない時はこまめに電源を切ることをお勧めします。

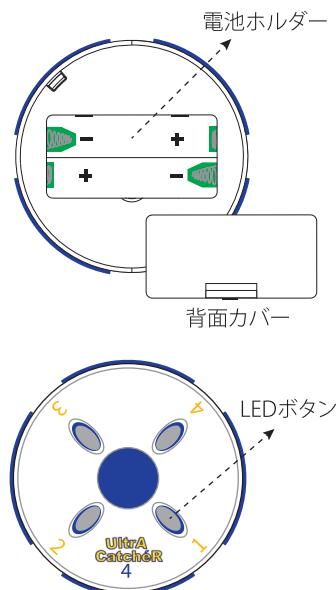

▶ ステータス表示

電源を入れると、3分間、10秒ごとにステータスライトが点灯します。

	緑色の点滅	接続可能
	紫色の点滅	接続済み
	赤色の点滅	電池残量少

電池残量が少なくなると、10秒ごとに赤色のライトが継続的に点滅します。その場合は、速やかに電池を交換してください。

▶ LED表示の意味(ゲーム内アクション)

	ポケストップを発見
	ポケモンを発見
	未発見のポケモンを発見
	ポケモンを捕獲中
	道具がいっぱいです
	ポケモンの捕獲に成功
	ポケストップを回すのに成功
	ポケモンに逃げられた
	モンスター・ボールがありません
	ポケモンボックスがいっぱいです
	通信が切断されました
	ポケストップを回すのに失敗

▶ 接続方法

- (1) スマートフォンのBluetoothをオンにします。
- (2) 「メインメニュー」をタップします。
- (3) 「設定」をタップします。
- (4) 「接続デバイス、サービス」をタップします。



- (5) 「外部デバイス」をタップします。



- (6) Ultra Catcher 4 の電源が入っていると、画面に4つのデバイスが表示されます。Ultra Catcher 4 のいずれかのLEDボタンを押すと、画面上の「Pokémon GO Plus」アイコンが点灯します。ペアリングしたい「Pokémon GO Plus」を画面から選択してタップしてください。



- (7) 接続に成功すると、Ultra Catcher 4 のLEDボタンが紫色に点滅し、画面上の「Pokémon GO Plus」アイコンが有効になったことを示します。



▶ 接続設定完了後の接続方法

- 「Pokémon GO」を起動し、画面右上のアイコンをタップします。
- アイコンが明るく点灯すれば、接続成功です。
- 接続に失敗した場合は、スマートフォンのBluetooth設定から「Pokémon GO Plus」の登録を解除(デバイスの削除)し、最初から接続手順をやり直してください。

▶ 注意事項

- 3分間操作がないと省電力モードに入ります。機能は継続しますが、ライトは点灯しません。
- ゲームの仕様上、1時間ごとに自動的に接続が切れます。その都度、ゲーム内で再接続してください。
- 本製品は防水・防塵仕様ではありません。
- アプリの移動速度制限により、時速24km以上で移動している間はポケモンの捕獲やアイテムの回収は行われませんのでご注意ください。
- デバイスおよびシステム要件：本デバイスのご利用には、Bluetooth Low Energy (BLE) 対応で「Pokémon GO」アプリがインストールされたスマートフォンが必要です。iOS 端末は、iOS 15 以上がインストールされた iPhone 6S 以降に対応しています。Android 端末は、Android 9.0 以上、4 GB 以上の RAM、および Bluetooth Smart (Bluetooth 4.0 以上) を搭載した 64 ビット端末のみに対応しています。
- 本製品は、任天堂、株式会社ポケモン、または Niantic による監修、承認、または後援を受けたものではありません。
- 温度環境：保管温度 -5°C ~ 30°C / 使用環境温度 0°C ~ 35°C (32°F ~ 95°F)。

P/N : Ultra Catcher 4

M/N : ZPP006G

005-102793
005-102794
005-102795
005-102796



Official Website



International Official



JAPAN